




# **OPTIONAL -VRP VANDAL RESISTANT PLATE AND SCREWS**

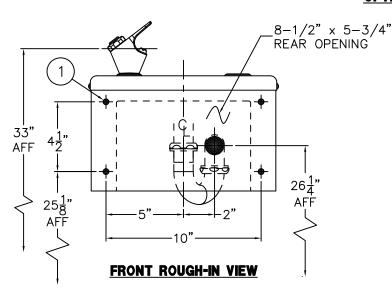

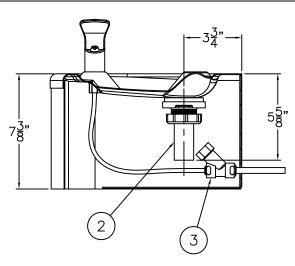


## **INSTALLATION INSTRUCTIONS:**

 - A-ROUGH-IN FOR THE FOLLOWING:
  - WALL ANCHORS FOR Ø3/8" FIXTURE MOUNTING PUNCHING.
  - 1-1/4" OD P-TRAP WASTE OUTLET BY OTHERS.
  - 1/4" NCT SUPPLY INLET CONNECTION (STRAIGHT STOP BY OTHERS RECOMMENDED)
- B- SEPARATE BASIN ASSEMBLY FROM HOUSING AND INSPECT FIXTURE TO ENSURE ALL TUBING CONNECTIONS AND BUBBLER HAVE NOT BECOME LOOSE DURING SHIPPING. CORRECT IF NECESSARY.
- C- ALIGN FIXTURE MOUNTING POINTS WITH INSTALLER PROVIDED ANCHORING HARDWARE AND SECURE WITH NUTS AND WASHERS BY OTHERS.
- D- MAKE UP CONNECTIONS TO 1-1/4" OD P-TRAP WASTE ASSEMBLY BY OTHERS.
- E- FLUSH SUPPLY LINES THOROUGHLY BEFORE CONNECTING 1/4" NCT SUPPLY INLET.
- F- ASSEMBLE BASIN TO FIXTURE & TEST OPERATION BY DEPRESSING BUTTON.





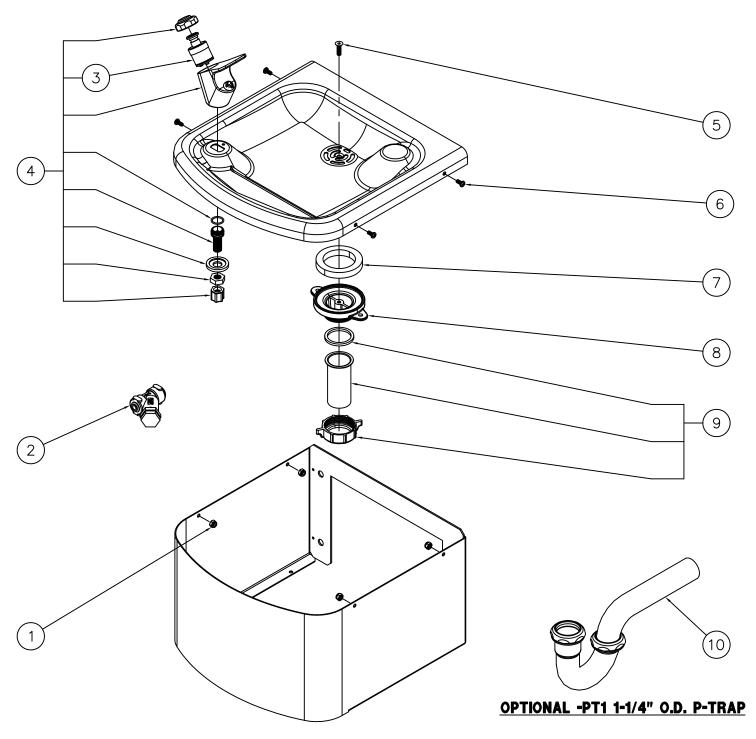

			TO DESENT			DATE	REVISED	9938-251-500	
			JULY 2007				09/	/19/07	
murdogk	Phone: (800) 59 www.murdock	91-9880 -supersecur.com	MANUFACTURE DATE			DATE	ISSUED	DRAWING NUMBER	
MURDOCK—SUPER SECUR P.O. Box 3527 Industry, CA 91746 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591–9880 www.murdock—supersecur.com www.murdock—supersecur.com www.murdock—supersecur.com www.murdock—supersecur.com www.murdock—supersecur.com www.murdock—supersecur.com www.murdock—supersecur.com www.murdock—supersecur.com www.murdock—supersecur.com									
ITEM PAR	RT NUMBER		DESCRIPTION		ITEM	PART	NUMBER	R DESCRIPTION	
		#8-32 x 3/8	3" LONG PHILLIPS						
5 0152	2-006-000	ALLEN FLAT	HEAD SCREW						
4 7000	0-011-001	DECK MOUNT	ED PUSHBUTTON E	BUBBLER ASSY	10	4953-	002-00	01-1/4" x $1-1/4$ " OUTER DIAMETER P-TRAP	
3 7000	0-060-000	VALVE CARTE	RIDGE WITH FOAM	WASHER	9	7000-	032-00	01 1-1/4" OUTER DIAMETER TAILPIECE ASSY	
		"Y" STRAINER			8			9 DRAIN ADAPTER	
1 0308	3-009-000	#8-32 NYLOI	N INSERT LOCKNU	T	7	7000-	006-000	O FLAT DRAIN ADAPTER GASKET	

03/08/16

TO PRESENT




#### INSTALLATION INSTRUCTIONS

## STANDARD PUSH PAD / PUSH BUTTON DRINKING FOUNTAIN

### **CONDITION:**

## SOLUTION:

# NO WATER FLOW:

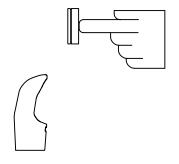

- 1.1 Check water main supply open.
- 1.2 Inspect stop (by others) open & no debris.
- 1.3 Inspect in-line strainer for debris clean.
- 1.4 Replace valve cartridge.


# WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 For push pad activated drinking fountains only:

  Open fixture and move valve bracket assembly further back from push pad.
- 2.2 Replace valve cartridge.

#### REDUCED WATER FLOW:

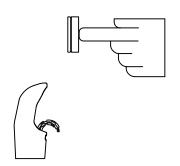

- 3.1 Adjust the valve flow rate. See appropriate fixture installation instructions.
- 3.2 Check water main supply for 20 psig minimum flow pressure.
- 3.3 Inspect stop (by others) open & no debris.
- 3.4 Inspect in-line strainer for debris clean.
- 3.5 Inspect bubbler for debris clean.
- 3.6 Inspect all tubing for twists or kinks.
- 3.7 Replace valve cartridge.

1 (r ~ () ) !	MURDUCK-SUPER SECURI
	P.O. Box 3527 Industry, CA 91744
2 × 1	MURDUCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746
	Phone: (800) 591—9880
and coding ,	www.murdock-supersecur.com
I	

#### DRINKING FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS

MANUFACTURE DATE DATE ISSUED DRAWING NUMBER

JANUARY 2006 09/28/05

TO PRESENT DATE REVISED 03/02/16

9940-200-001